

Amica

FK326.6 DFZV / KGC 15375 W
FK326.6 DFZVX / KGC 15376 E
FK356.6 DFZV / KGC 15377 W
FK356.6 DFZVX / KGC 15378 E

DE - GEBRAUCHSANWEISUNG.....2

EN - OPERATING MANUAL.....26

GENERAL INFORMATION

EN

Dear customer,

This fridge freezer is a combination of exceptional user-friendliness and excellent efficiency. Prior to dispatch, each unit was carefully checked for its safety and operating capabilities.



Before starting the appliance, please read this operating manual carefully.



Note!


This fridge-freezer is intended for use at home only.

The manufacturer reserves the right to introduce modifications, which do not affect the operation of the appliance. The changes in the equipment, as well as the inside and outside decoration, which do not affect its functionality and safety are permissible.

TABLE OF CONTENTS

CONSTRUCTION AND EQUIPMENT OF THE APPLIANCE.....	28
GUIDELINES CONCERNING THE SAFETY OF USE.....	30
INSTALLATION AND OPERATING CONDITIONS OF THE APPLIANCE.....	32
CHANGE OF THE DOOR HINGING.....	34
OPERATION AND FUNCTIONS.....	36
USING THE REFRIGERATOR EFFICIENTLY.....	40
DEFROSTING, WASHING AND MAINTENANCE.....	42
TROUBLE-SHOOTING.....	45
ENVIRONMENTAL PROTECTION.....	47
SPECIFICATION.....	48

CONSTRUCTION AND EQUIPMENT OF THE APPLIANCE

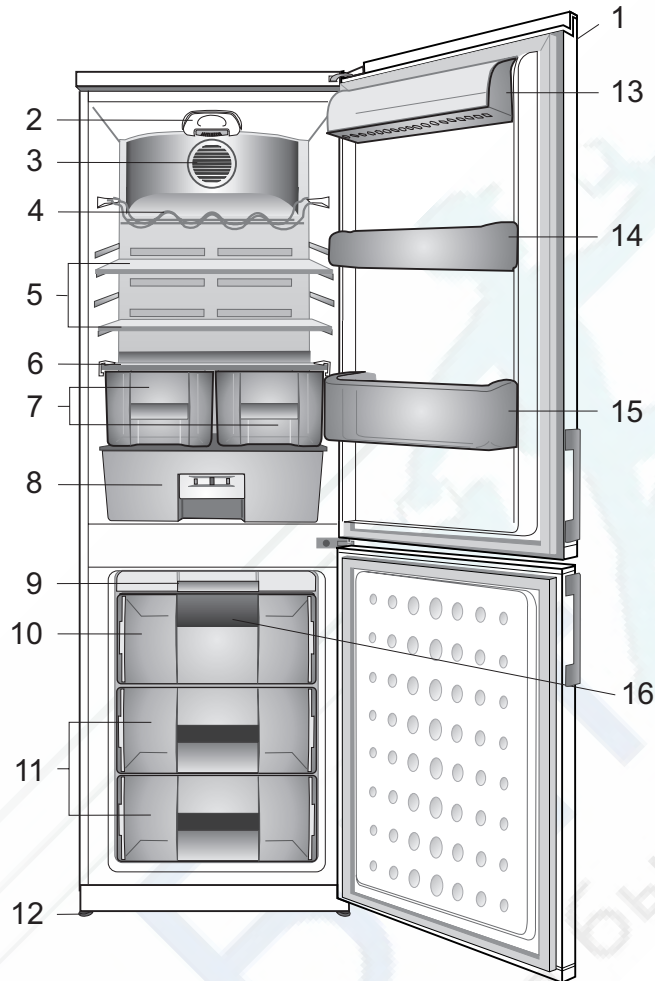

1. Control panel
2. Interior light
3. Fresh Food fan
4. Wine rack
5. Adjustable Cabinet shelves
6. Crisper cover
7. Salad crispers
8. Fresh zone compartment
9. Ice tray support & ice tray
10. Compartment for quickly freezing
11. Compartments for frozen foods keeping
12. Adjustable front feet
13. Dairy Compartment
14. Shelf for jars
15. Shelf for bottles
16. Freezer fan



The accurate description of the equipment for the model of the fridge-freezer purchased by you may be found in the table on next page.

CONSTRUCTION AND EQUIPMENT OF THE APPLIANCE

items of equipment	FK326.6 DFZV KGC 15375 W	FK356.6 DFZVX KGC 15378 E	FK356.6 DFZV KGC 15377 W	FK326.6 DFZVX KGC 15376 E
Equipment of the fridge				
Glass Shelf	2+1	3+1	3+1	2+1
Glass shelf above the vegetable compartment	1	1	1	1
Vegetable compartment	2	2	2	2
Fresh zone compartment	1	1	1	1
Medium door shelf	2	3	3	2
Large door shelf	1	1	1	1
Upper shelf cover	1	1	1	1
Egg tray	2	2	2	2
Bottle tray	1	1	1	1
Lighting type	bulb	bulb	bulb	bulb
Equipment of the freeze				
Medium drawer	1	1	1	1
Lower drawer	1	1	1	1
Chamber door	1	1	1	1
Tray	1	1	1	1
Ice tray	1	1	1	1

GUIDELINES CONCERNING THE SAFETY OF USE




- **The Manufacturer shall not be held liable for the damage arising from the failure to observe the principles contained in this manual.**
- **Keep this manual for future reference, or to pass it over to the possible next user.**
- This appliance is not intended for use by persons (including children) with limited physical, sensual or psychical capabilities and persons who lack experience or familiarity with the appliance, unless attended or in accordance with the operating manual for the appliance delivered by persons responsible for their safety.
- **Do not allow the unattended children to use the appliance. Do not allow them to play with the appliance. They must climb inside the drawers and swing on the doors.**
- The fridge-freezer operates properly at the SN-T ambient temperature (see page 45). Do not use it in the cellar, unheated summer cottage during autumn and winter.
- When placing, moving, lifting the appliance, do not hold the door handles, pull the condenser at the rear part of the refrigerator and touch the compressor unit.
- **Power cord replacement: 'Y' type connection.**

In case of a rupture of a permanent power cord, have it replaced by a specialised service department or by an authorised electrician.



- **When transporting, moving or placing the fridge-freezer do not tilt it by more than 40° from the vertical position. Should such a situation occur, the appliance may be switched on after minimum 2 hours from its placement in the right position (fig.1).**

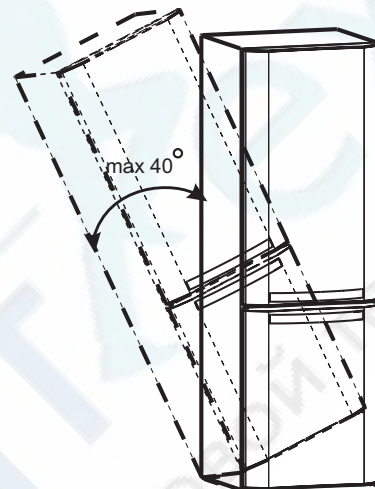

- Pull the plug out from the mains socket before each maintenance activity. Do not pull the cord, but hold the body of the plug instead.
- The cracking-like sound, which the appliance may emit is caused by expansion and shrinking of parts as a result of temperature variations.
- For safety reasons do not repair the appliance on your own. Repairs carried out by persons who do not have required qualifications may constitute a serious hazard for the user of the appliance.

GUIDELINES CONCERNING THE SAFETY OF USE



- Air the room in which the appliance is placed for a few minutes (the size of the room for a product containing isobutane/R600a must be at least 4m³) in case of the damage of the cooling system.
- Do not refreeze the partly thawed products.
- Do not store beverages in bottles and cans, especially the carbonated beverages in the freezer chamber. The cans and the bottles may explode.
- **Do not put the frozen products, taken out directly from the freezer (lollies, ice cubes, etc.) into your mouth, their low temperature may cause severe frost-bites.**



- Make sure you do not damage the cooling system, by punching the refrigerant pipes in the evaporator or breaking the pipes. The refrigerant splashes are flammable. Rinse the eyes with clean water and call for medical assistance immediately in case of their contact with the refrigerant.

Anti-bacteria System

Antibacteria System protects foods and products inside the refrigerator from bacteria and mould which may cause unpleasant smells and shorten storage time. Antibacteria System prolongs the freshness of food. Special material used to construct the fridge liner prevents bacterial, microorganism and mould growth.



anti - bacteria
system

Fresh Zone*

Products stored in the Fresh Zone compartment remain fresh even up to three times longer than those stored in standard conditions. They keep their nutritive values, taste, smell and vitamins.

 
fresh zone

*depending on the model

INSTALLATION AND OPERATING CONDITIONS OF THE APPLIANCE

Installation before using the appliance for the first time

1. Take the product out of the package, remove the scotch tapes protecting the door and the equipment. The possibly remaining adhesive stains may be removed with a mild washing agent.
2. Do not throw away the polystyrene elements of the packaging. In the case of the necessity to transport the fridge-freezer, pack it in the polystyrene elements and film, as well as protect it with a scotch tape.
3. Clean the interior surface of the fridge-freezer and the elements of the equipment with a washing agent dissolved in lukewarm water, then wipe it dry.
4. Place the fridge-freezer on an even, flat and stable surface, in dry, aired and shadowy room, far from the heat sources such as an oven, cooktop, central heating radiator, central heating pipe, hot water installation, etc.




Minimal distances from the heat sources

- from the electric gas and other ovens - 30 mm,
- from oil or coal fired ovens - 300 mm,
- from in-built ovens - 50 mm


If there is no possibility to ensure the above-mentioned distances, provide an appropriate insulation board.

5. Make sure the appliance is placed in the horizontal position by screwing in 2 adjustable front legs (fig. 2)

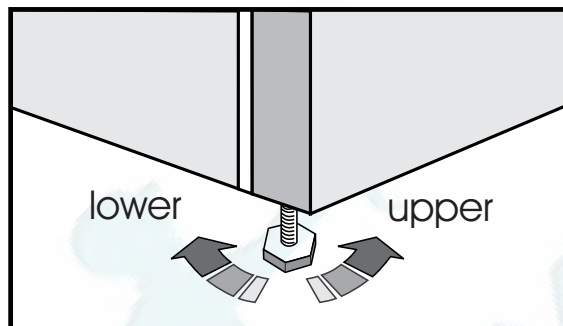


2


6. In order to ensure easy opening of the door, the distance between the side wall of the appliance (from the side of the door hinges), and the wall should amount to 50/70mm
7. Ensure adequate ventilation of the room and free air circulation from all sides of the appliance (fig. 3).

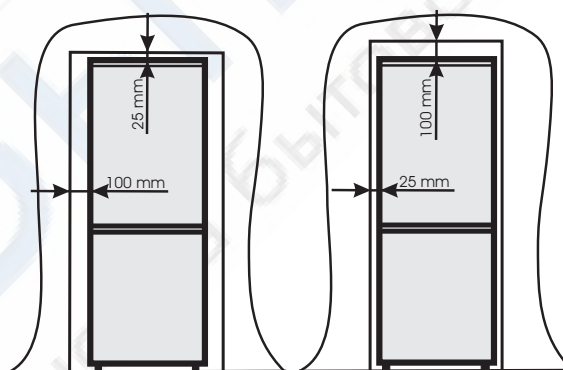



3

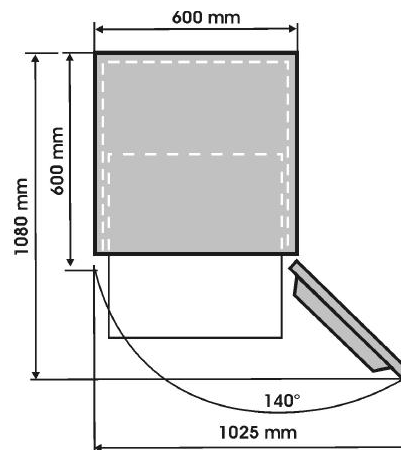


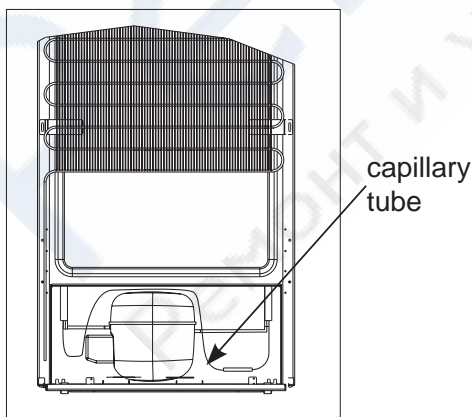
INSTALLATION AND OPERATING CONDITIONS OF THE APPLIANCE

 Put the back airing lid to the back of your refrigerator to set the distance between the refrigerator and the wall

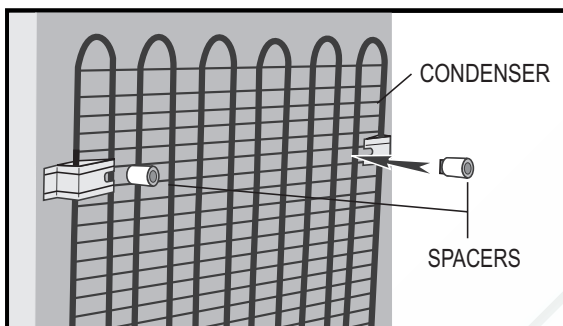

 The rear wall of the refrigerator, in particular, the condenser and other elements of the cooling system may not contact other elements, which may damage them, (e.g. central heating pipe and the water supply pipe).

 It is prohibited to readjust or modify any parts of the unit. It is crucial not to damage the capillary tube visible in the compressor recess. The tube may not be bent, straightened and wound.
If the capillary tube is damaged by the user the guarantee will be void (fig. 4).



4

Mains connection

- Before the appliance is connected to the mains, set the adjustment knob to the "0" position.
- This appliance should be connected to AC 230V 50Hz supply socket. The socket must be fitted properly, and must be supplied with an earthing conduit and a 10A fuse.
- It is required by the law that the appliance is properly earthed. The manufacturer will not be held liable for any damage or injury which may ensue the failure to fulfil this requirement.




Do not use adapters, multiple sockets and two-wire extension leads. If it is necessary to use the extension lead, it must be equipped with a protection ring and a single socket and must have VDE/GS safety certificate.

- If an extension lead is used (with a protection ring and safety certificate), its socket must be located in a safe distance, away from the sinks, and must not be in a place where it could be flooded by water of waste water.
- See type plate at the lower part of the internal wall of the appliance for detailed specifications.

Disconnecting the mains


- Make sure the appliance can be easily disconnected from the mains, either by pulling the plug out of the mains socket, or by switching a two-pole switch off (fig. 5).

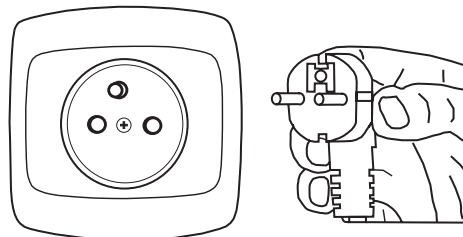


5

CHANGE OF THE DOOR HINGING

1. Switch off the appliance.
2. Empty the appliance from the foodstuff.
3. Proceed in numerical order

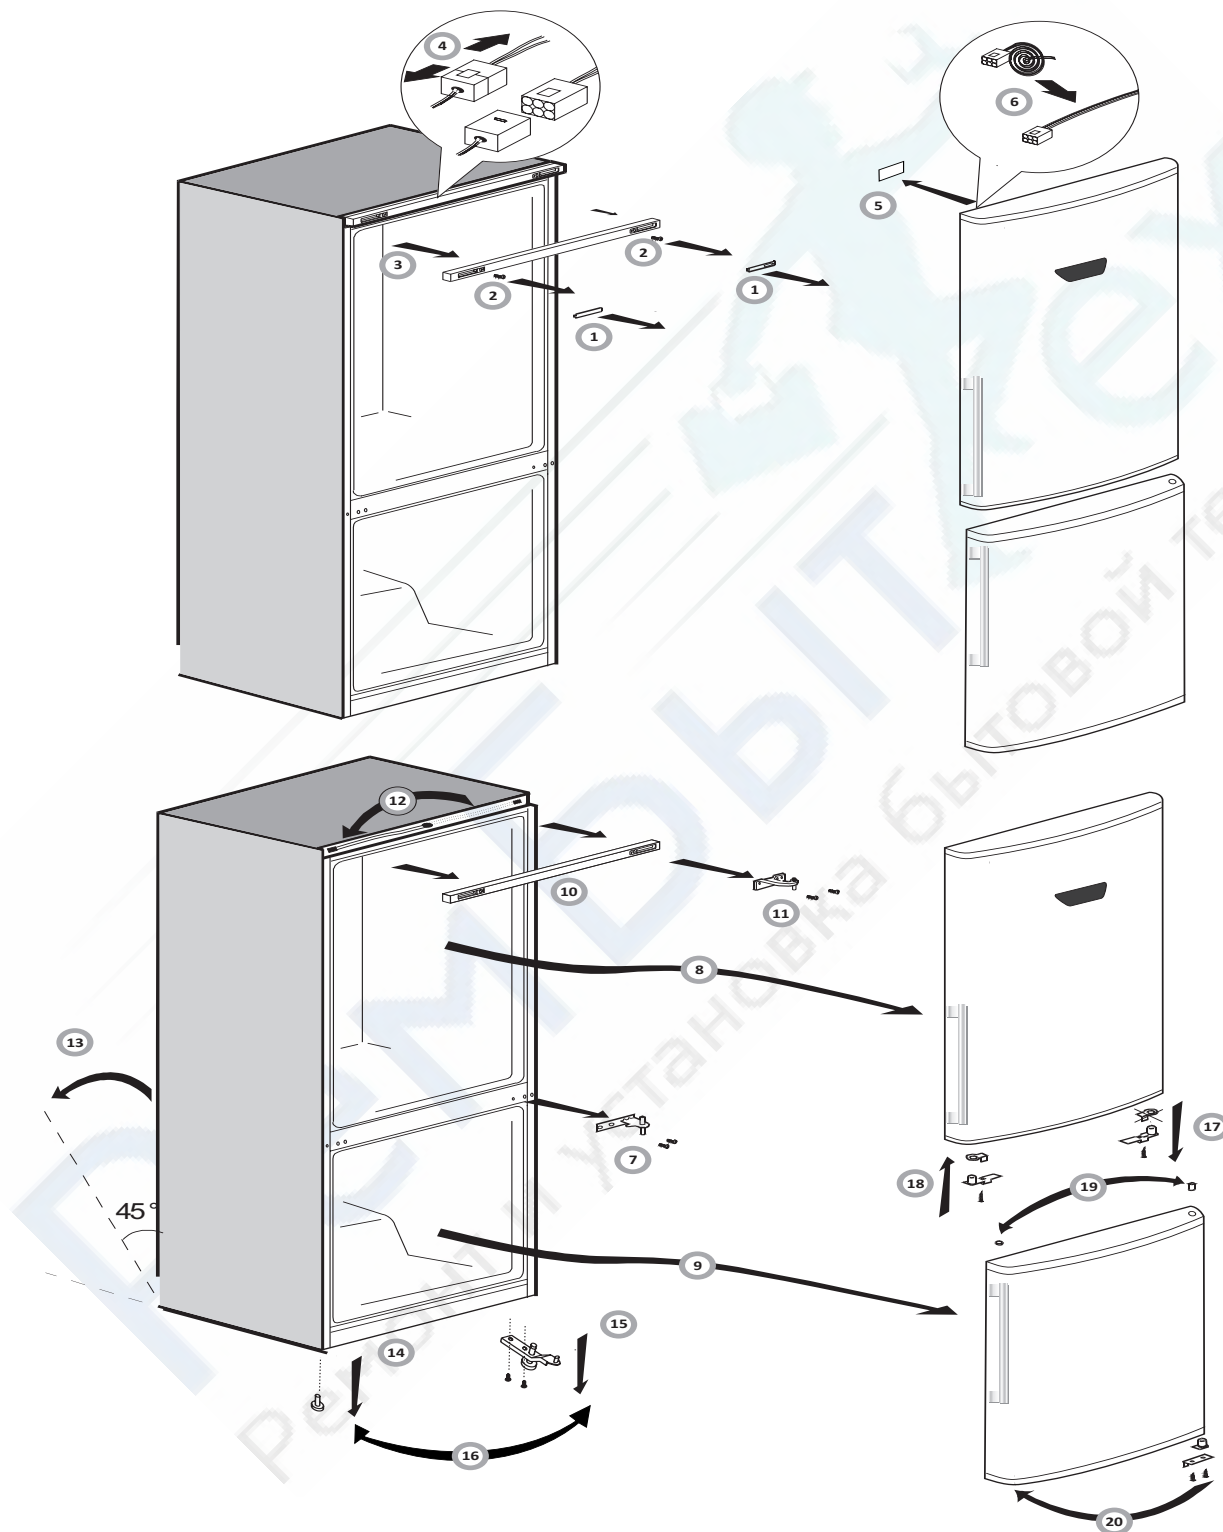


CHANGE OF THE DOOR HINGING

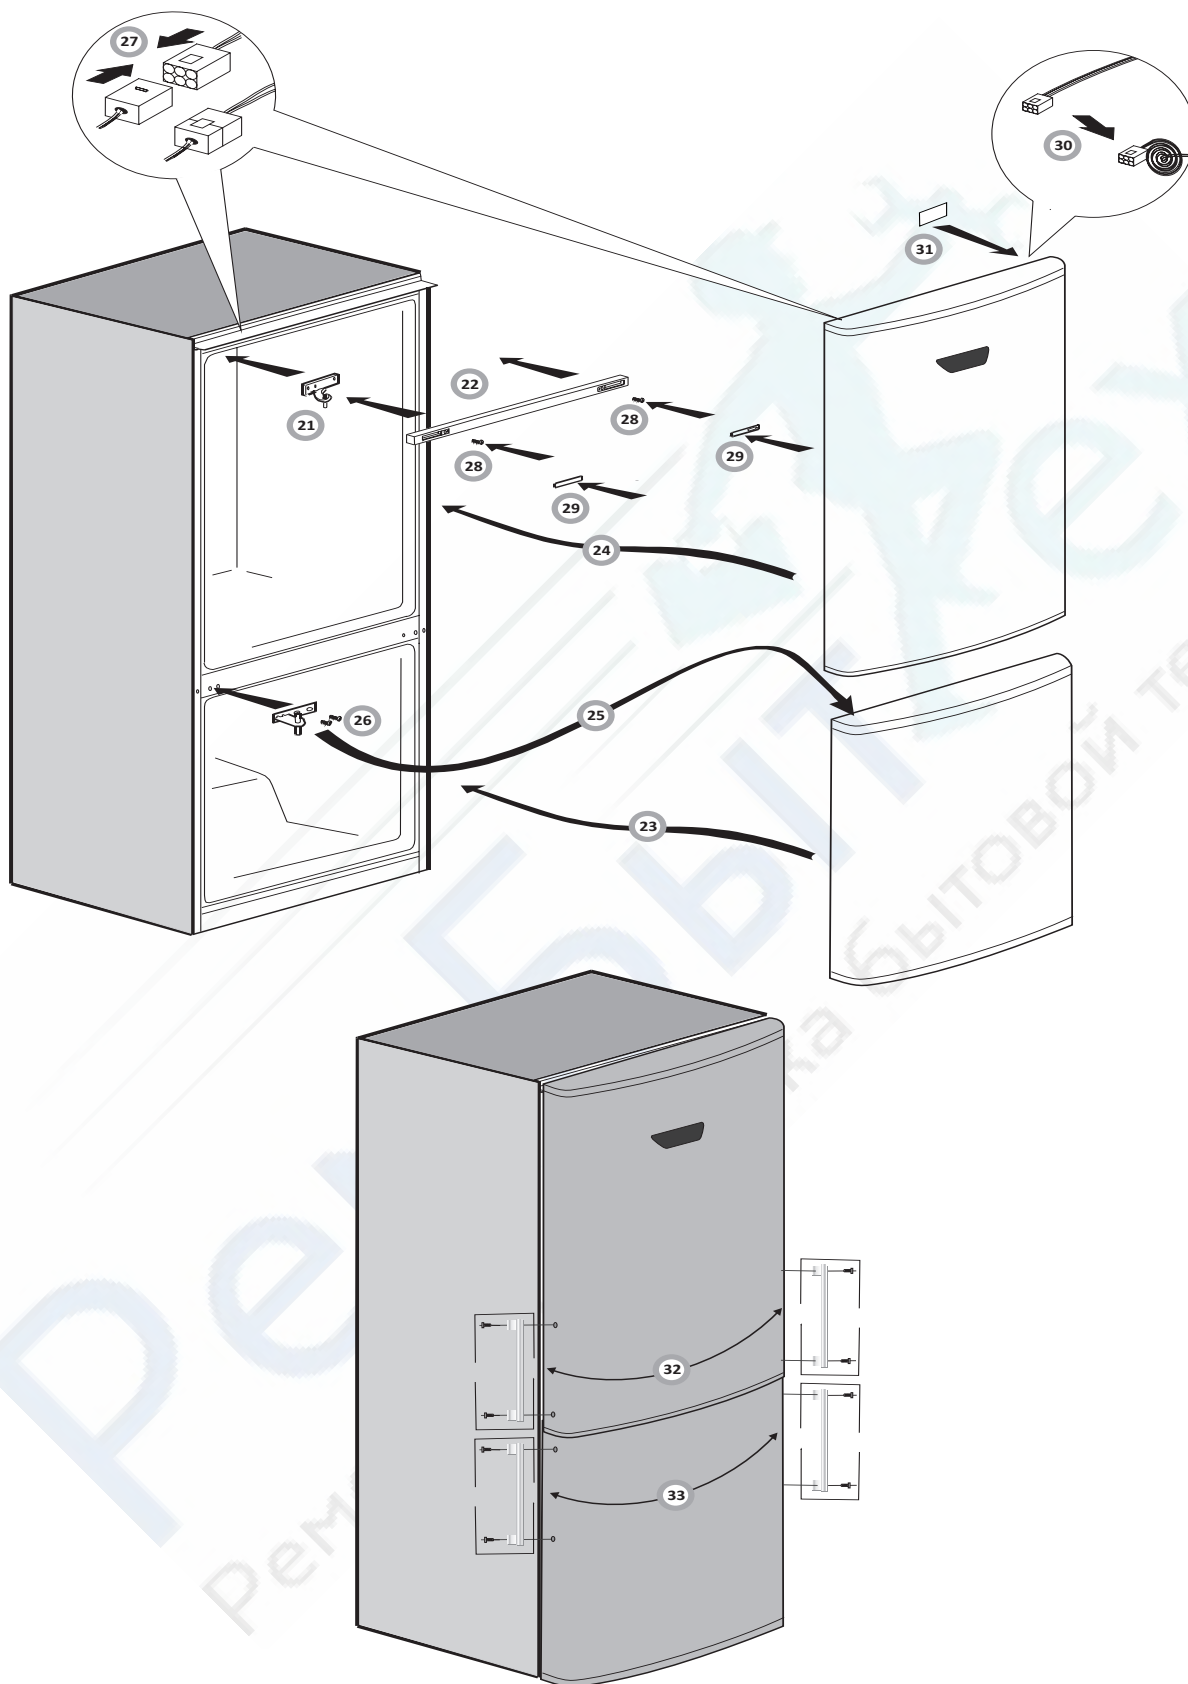

OPERATION AND FUNCTIONS

Setting the operating temperature

Fresh Food and Freezer Compartment Temperature can be adjusted by the electronic display (Item 6)

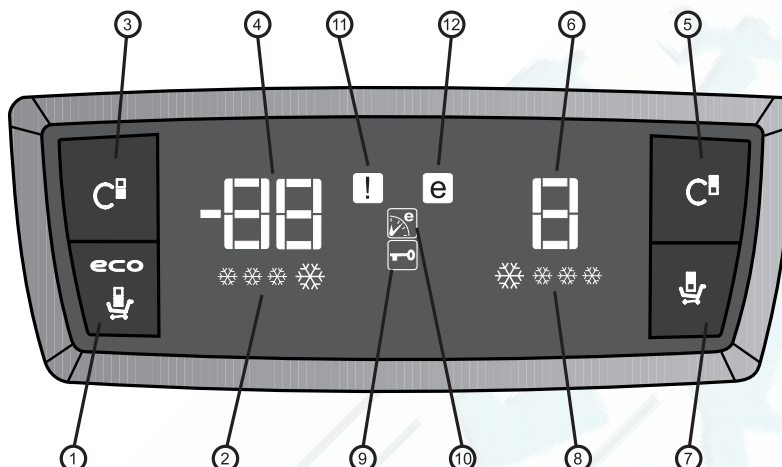

Control Panel

Control Functions

Considering Figure 2, the following functions are implemented on the appliance.

- | | | | |
|----|---|-----|--|
| 1. | Super Freeze Function | 6. | Fridge Compartment - Temperature Setting Indicator |
| 2. | Super Freeze Indicator | 7. | Super Fridge Function |
| 3. | Freezer Set Function | 8. | Super Fridge Indicator |
| 4. | Freezer Compartment – Temperature Setting Indicator | 9. | Lock Function |
| 5. | Fridge Set Function | 10. | Eco-Fuzzy Function |
| | | 11. | High Temperature/Error Warning Indicator |
| | | 12. | Economic Usage Indicator |

Description of the Control Functions

1. Super Freeze Function

Quick Freeze indicator will remain lit when the Quick Freeze function is enabled. To cancel this function press Quick Freeze button again. Quick Freeze indicator will turn off and return to its normal settings. If you do not cancel it, Quick Freeze will cancel itself automatically after 4 hours or when the freezer compartment reaches to the required temperature.

If you want to freeze large amounts of fresh food, press the Quick Freeze button before putting the food into the freezer compartment. Compressor will not start running immediately if you press the Quick Freeze button for more than once with short intervals since the electronic circuit protection system will be activated.

This function is not recalled when power restores after a power failure.

2. Super Freeze Indicator

This icon flashes in an animated style when the Fast Freeze function is active.

3. Freezer Set Function

This function allows you to make the freezer compartment temperature setting. Press this button to set the temperature of the freezer compartment to -18, -20, -22, -24 respectively.

4. Freezer Compartment Temperature Setting Indicator

Indicates the temperature set for the Freezer Compartment.

OPERATION AND FUNCTIONS

5. Fridge Set Function

This function allows you to make the fridge compartment temperature setting. Press this button to set the temperature of the fridge compartment to 8, 6, 4, 2 respectively.

6. Fridge Compartment Temperature Setting Indicator

Indicates the temperature set for the Fridge Compartment.

7. Super Fridge Function

When you press Quick Fridge button, the temperature of the compartment will be colder than the adjusted values. This function can be used for food placed in the fridge compartment and required to be cooled down rapidly.

If you want to cool large amounts of fresh food, it is recommended to activate this feature before putting the food into the fridge. Quick Fridge indicator will remain lit when the Quick Fridge function is enabled.

To cancel this function press Quick Fridge button again. Quick Fridge indicator will turn off and return to its normal settings. If you do not cancel it, Quick Fridge will cancel itself automatically after 2 hours or when the fridge compartment reaches to the required temperature. This function is not recalled when power restores after a power failure.

8. Super Fridge Indicator

This icon flashes in an animated style when the Quick Fridge function is active.

9. Lock Function

Press Freezer Set and Fridge Set buttons simultaneously for 3 sec. to activate the Lock function. Not other function can be selected from the display panel when the lock function is active. Press Freezer Set and Fridge Set buttons simultaneously for 3 sec. again to deactivate the Lock function.

10. Eco (Special Economic Usage) Function

Press the Quick Freeze button for 3 seconds to activate the Eco Function. If this function is activated, refrigerator will start to operate at the most economic mode minimum 6 hours later and economic usage indicator will turn on. Press the Freeze button for 3 seconds again to deactivate the Eco Function.

11. High Temperature/ Error Warning Indicator

This light comes on during high temperature failures and error warnings.

12. Economic Usage Indicator

Economic Usage Indicator turns on when the Freezer Compartment is set to -18°C. Economic Usage Indicator turns off when the Quick Fridge or Quick Freeze function is selected.


OPERATION AND FUNCTIONS

Storage of food in the fridge-freezer

Observe the following recommendations to ensure the food remains fresh.

- The products should be placed on plates in containers or packed in food wrap. Distribute them evenly all over the shelves.
- Pay attention whether the food contacts the rear wall, if so, it may cause frosting or wetting of the products.
- **Do not put dishes with hot content into the fridge**
- Products which take over foreign flavours easily such as butter, milk, white cheese and products with intense flavour, such as fish, smoked meat, hard cheese must be placed on shelves, packed in food wrap or in tightly sealed containers.
- Storage of vegetables containing significant quantity of water will cause the deposition of water steam on the vegetable containers, it does not impact the proper functioning of the fridge.
- Before putting the vegetables into the fridge, dry them well.
- Excessive moisture shortens the shelf life of vegetables, especially the leafed vegetables.
- Do not wash the vegetables before storing in the refrigerator. Washing removes the natural protection, therefore it is better to wash the vegetables directly before consumption.
- It is recommended to place the products in freezer drawers 1, 2, 3 up to natural loading capacity (fig. 6).
- Stacking of products on the freezer shelves is acceptable.
- It is acceptable to place products beyond the natural loading capacity by 20-30 mm.

- In order to increase the loading capacity of the freezer chamber and allow staking of products on the freezer evaporator wire shelves up to maximum height it is possible to remove drawers 1 and 2.

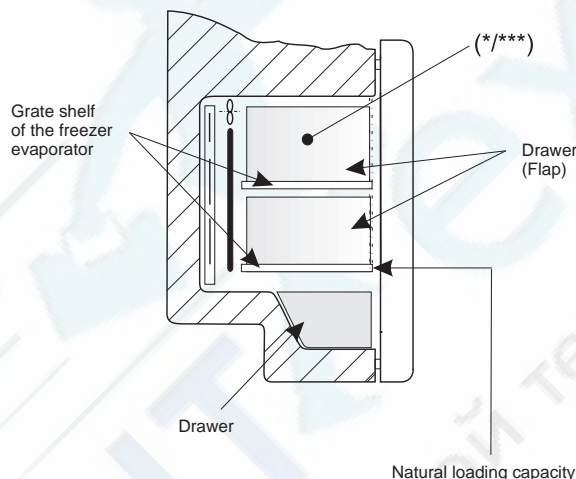

6

Freezing food

- Practically all the food products, except for vegetables consumed raw, such as lettuce can be frozen.
- Only food products of the highest quality, divided into small portions for single use, should be frozen.
- Products should be packed in materials that are odourless, resistant to air and moisture penetration, and not susceptible to fat. Plastic bags, polyethylene and aluminium sheets are the best wrapping materials.
- The packaging should be tight and should stick to the frozen products. Do not use glass containers.
- Keep the fresh and warm foodstuff at ambient temperature away from the products, which have already been frozen.
- We advise not to place more of fresh food at a time to the freezer per day (see table on page 44).

OPERATION AND FUNCTIONS

- In order to maintain good quality of the frozen food, reorganise the food that is in the middle of the freezer, so that it does not touch the products that are not frozen yet.
- It is recommended to move the already frozen products to one side and place the fresh products that are to be frozen to the opposite side, as close to the rear and side walls as possible.
- To free products, use space marked (*/**).
 - **Bear in mind that the temperature in the freezer is affected by several factors, including the ambient temperature and the quantities of food products in the chamber, frequency of opening the door, amount of frost in the freezer, and the thermostat setting.**
 - **If you cannot open the freezer door immediately after closing it, allow 1-2 minutes for negative pressure to compensate, and retry opening the door.**

The time of storage of the frozen products depends on their quality when fresh, before freezing and on the storage temperature.

The following storage periods are recommended when the temperature of -18°C or lower is maintained:

Products	Months
Beef	6-8
Veal	3-6
Giblets	1-2
Pork	3-6
Poultry	6-8
Eggs	3-6
Fish	3-6
Vegetables	10-12
Fruit	10-12

USING THE REFRIGERATOR EFFICIENTLY

Practical everyday tips

- Do not place fridges or freezers next to radiators, heaters, stoves or in direct sunlight.
- Make sure that air vents are not covered up and clean the dust off them once or twice a year.
- Select the right temperature: **6 to 8°C in your refrigerator** and **-18°C** in your freezer is sufficient.
- When on holiday, turn up the temperature in your fridge.
- Only open your fridge or freezer when necessary. It helps if you know what food they contain and where it is located. Return food to the fridge or freezer as soon as possible after you have used it so that it doesn't warm up too much.
- Wipe out the inside of your fridge regularly with a cloth soaked in a mild detergent. Appliances which are not self-defrosting will require regular defrosting. Don't allow frost layers thicker than 10 mm to form.
- Keep the seal around the door clean, otherwise it won't shut properly. Always replace broken seals.

Understanding the stars

- * Temperature is at least **-6°C**; sufficient to store frozen food for about a week. Drawers or compartments marked with one star used to be a feature of (mostly) cheaper fridges.
- ** Food can be stored at **-12°C** or below for 1-2 weeks without losing their taste. Not suitable for freezing food.
- *** Mainly used to store foods at **-18°C** or below. Can also be used to freeze up to 1 kilogram of fresh food.
- **** This appliance is suitable for storing foods at **-18°C** or below and freezing larger quantities of fresh foods.

USING THE REFRIGERATOR EFFICIENTLY

Storage zones in the refrigerator

- Due to the natural circulation of the air in the appliance, there are different temperature zones in the refrigerator chamber.
- The coldest area is directly above the vegetables drawers. Use this area for all delicate and highly perishable food e.g.
 - Fish, meat, poultry
 - Sausage products, ready meals
 - Dishes or baked goods containing eggs or cream
 - Fresh dough, cake mixtures
 - Pre-packed vegetable and other fresh food with a label stating it should be kept at a temperature of approx 4°C.

- The warmest area is in the top section of the door. Use this for storing butter and cheese.

Food that should not be stored in a refrigerator

- Not all food is suitable for storing in the refrigerator. These include:
 - Fruit and vegetables which are sensitive to cold, such as bananas, avocado, papaya, passion fruit, aubergines, peppers, tomatoes and cucumbers.
 - Fruit which is not yet ripe
 - Potatoes



DEFROSTING, WASHING AND MAINTENANCE


Defrosting the fridge

There will be an automatic defrost at the evaporation area of the appliance when it needs. The water drains into reservoir at the back of the appliance and evaporates automatically through the compressor heat .

Ensure that the reservoir is fixed properly above the compressor.



Check that the tube is permanently placed with its end in the collecting tray on the compressor to prevent the water spilling on the electric installation or on the floor

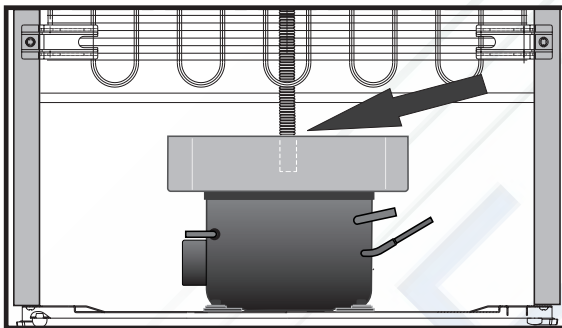

- The appliance operates in cycles: it refrigerates (then the frost settles on the rear wall), and defrosts (water flows down the rear wall).



Disconnect the appliance from the mains before cleaning by removing the plug from the mains socket or switching off the fuse. Prevent water from penetrating the control panel or the light.

- Do not use defrosting aerosols. They may cause the formation of explosive mixture, or contain solvents which may damage the plastic components of the appliance and even be harmful to health.

- Make sure the water used for cleaning does not flow into the evaporation container through the discharge opening.
- The whole appliance, except for the door gasket must be cleaned with a mild cleaning detergent. The door gasket should be cleaned with water and wiped dry.
- Wash all the accessories (vegetable containers, door shelves, glass shelves, etc.).

Automatic fridge defrosting

The fridge chamber has been equipped with the automatic defrosting function. However, frost may settle on the rear wall of the fridge chamber. This happens usually, when large quantities of fresh food products are stored in the fridge.

Automatic fridge defrosting

The freezer chamber has been equipped with the automatic defrosting function (no-frost). The food is frozen in the cooled circulation air, and the moisture from the freezer chamber is discharged outside. As a result, no ice and frost is produced in the freezer and the products do not freeze on each other.

Washing the fridge and freezer chambers manually

It is recommended to wash the fridge and freezer chambers at least once a year. This prevents the formation of bacteria and foul odours. Switch the appliance, using button (1), remove the food from the chambers and wash them using water with a mild detergent. Then, wipe the chambers dry with a cloth.

DEFROSTING, WASHING AND MAINTENANCE


The fans inside the freezer and fresh food compartments circulates cold air. Never insert any object through the guard. Do not allow children to play with the fresh food and freezer fan.

Never store products that contain inflammable propellant gas (eg dispensers, spray cans etc.) or explosive substances.

Don't cover the shelves with any protective materials, which may obstruct air circulation.

Do not allow children to play with the appliance or tamper with the controls.

Do not obstruct the fan guards to ensure that you obtain the best possible performance from your appliance.

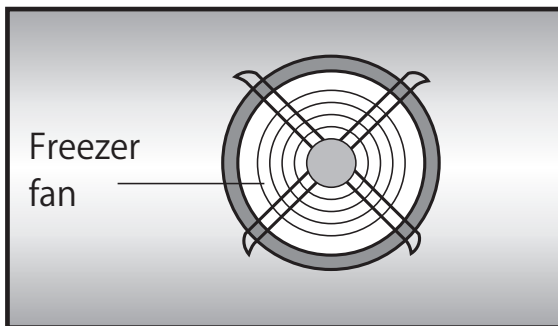

Warning! Your appliance is fitted with 2 circulating fans which are essential for the performance of the refrigerator. Please ensure the fans are not blocked (stopped) or impaired by food or packaging. Blocking (stopping) or impairing the fan can result in an increase of the internal freezer temperature (Thawing).

Clean the condenser at the back of the appliance once a year using a brush or a vacuum cleaner. Dust build-up leads to increased energy consumption.

Inspect the door gasket at regular intervals. Clean with water only, and wipe totally dry.

Cleaning of the accessories

Door shelves:

Remove all food from the door shelves.

Lift the cover of the shelf upwards and pull it off sideways.

Remove the bottom of the door shelf by pushing it upwards.


Collecting container (Pan):

Make sure that the pan at the back of the appliance is always clean.

Gently release the snap of the pan from the compressor by pushing it using a tool (like screwdriver), so that the pan can be removed.

Lift the pan, clean it and wipe it dry.

Re-assemble in reverse order.

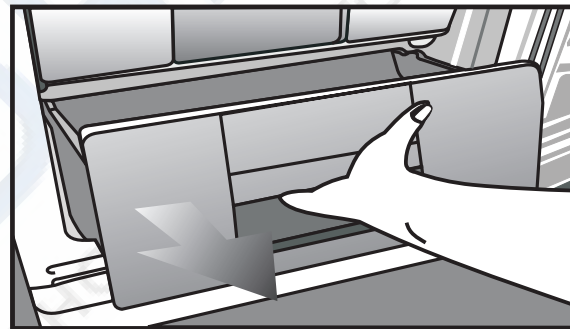

Crisper or Drawers:

To clean a drawer, pull it out as far as possible, tilt it upwards and then pull it out completely.

DEFROSTING, WASHING AND MAINTENANCE





Replacing the interior light bulb

In case that the light bulb is out of function it is easily to replace. First make sure that the refrigerator / freezer is disconnected from the power supply by removing the plug. Take a flat screwdriver and keep it carefully without force into the left gap between lamp cover and internal cabinet. Then press the handle of the screwdriver carefully to the left side until you notice that the left pin of the cover is disengaged. Repeat this procedure on the right gap, however now press the handle of the screwdriver carefully to the right side. If both sides are loosened the cover can be removed easily.

Ensure that bulb is screwed securely in the bulb holder. Plug the appliance into the power supply. If the light still fails, replace E14 screw-cap type 15 Watt (Max) bulb from your local electrical store and then fit it. Carefully dispose of the burnt-out light bulb immediately. If you have changed the light bulb please fix the cover again in it's former position. Take care that the cover snaps-in correctly.



Do not use bulbs of greater or smaller power, apply only the bulbs of parameters given above.

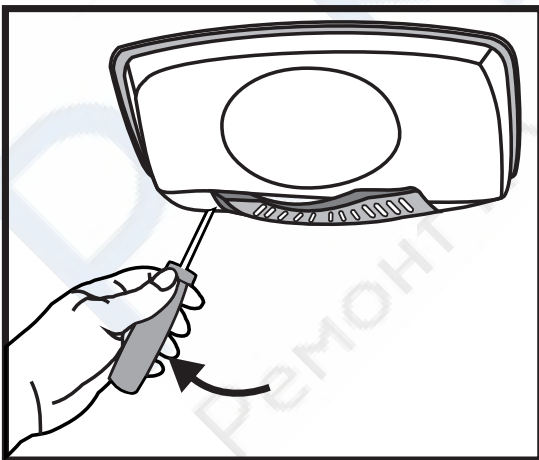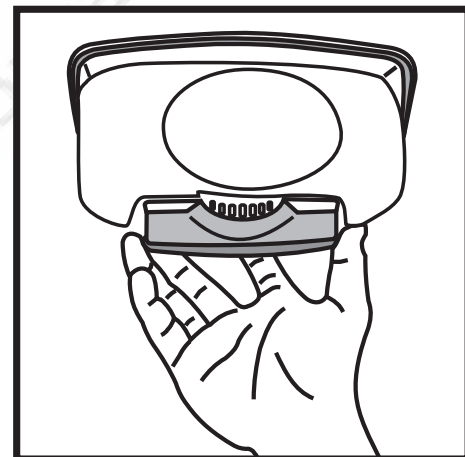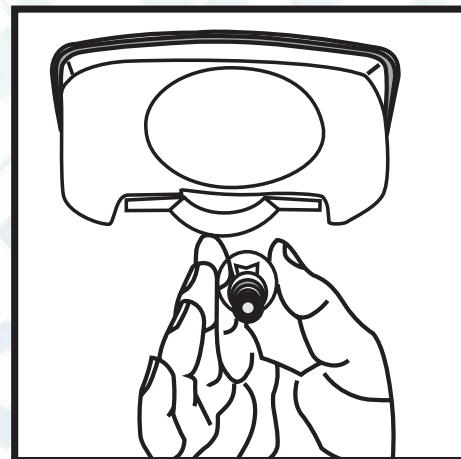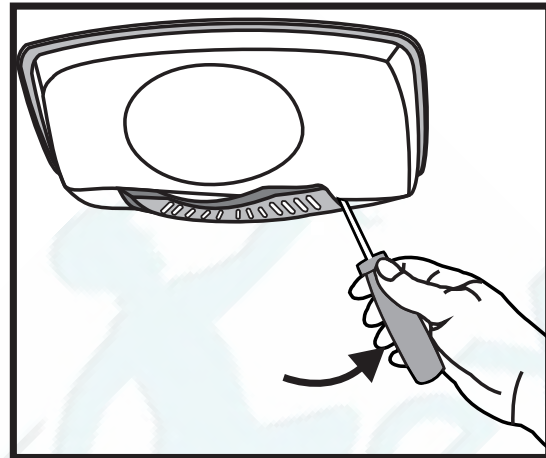

TROUBLE-SHOOTING

Problems	Possible causes	Remedies
The appliance does not work	Electric circuit rupture	<ul style="list-style-type: none"> - check whether the plug is properly inserted into the socket - check whether the power cable of the appliance is not damaged - check whether there is voltage in the socket, by plugging another appliance, e.g. a night lamp
The lighting inside the chamber does not work	The bulb is loose or fused	<ul style="list-style-type: none"> - see the point above "The appliance does not work" – fit the bulb correctly or replace it.
Temperature inside the appliance is not low enough	The ambient temperature is higher or lower than the SN-T climate range	- the appliance is adapted to operation in the SN-T climate range (see page 45).
	The appliance is located at the sunlit place or near the heat sources	- move the appliance to another place. Observe the guidelines contained in the manual
	Too much warm food loaded at a time	- wait 72 hours until the food becomes cool (freezes) and the required temperature is reached inside the chamber
	Internal air circulation hindered	- place the food and containers in such a way that they do not touch the rear wall of the fridge
	The air circulation at the back of the appliance is hindered	- move the appliance min. 30 mm away from the wall
	The door of the fridge/freezer are opened too often and/or remain open for too long	- reduce the frequency of opening the door and/or shorten the time when door remains open
	The door does not close completely	- place the food and containers so that they would not interfere with door closed

TROUBLE-SHOOTING

Problems	Possible causes	Remedies
	The compressor is switched on too rarely	- check whether the ambient temperature is not lower than 10°C
	Door gasket inserted incorrectly	- press the gasket in
The appliance works continuously	See. "Temperature inside the appliance is not low enough for description of other possible causes"	- See. "Temperature inside the appliance is not low enough for description of other possible remedies"
Water collects in the lower part of the appliance	The water discharge opening is clogged	- clean the discharge opening (see the operating manual – chapter entitled "Defrosting the fridge")
	Internal air circulation hindered	- place the food and containers in such a way as that they do not touch the rear wall of the fridge
The appliance generates unusual noise	Incorrect levelling of the appliance	- level the appliance properly
	The appliance touches furniture and/or other objects	- place the appliance at a location that ensures proper clearances around it

Certain sounds can be heard during normal use of the refrigerator, which do not affect its correct operation.

Sounds, which can be easily prevented:

- noise caused by the appliance which is not level - adjust the position with the adjustable turn-in front feet. Alternatively, place pads made of soft material under the rear rollers, especially when the appliance is placed on tiles.
- touching the adjacent piece of furniture - move the refrigerator away.
- creaking of the drawers or shelves - take out and put back the drawer or shelf.
- sounds of clinking bottles - move bottles apart.

Sounds heard during normal use are mainly due to operation of the thermostat, compressor (switching on) and cooling system (thermal expansion and contraction of the radiator caused by flow of the cooling agent).

ENVIRONMENTAL PROTECTION

Ozone layer protection



The refrigerants and foaming agents, which are 100% free of FCKW and FKW have been used for manufacturing our product. Therefore we help protecting the ozone layer and prevent the greenhouse effect increase. On the other hand, the innovative technology and environmentally friendly insulation help in reducing energy consumption.

Recycling of the packaging



Our packaging are made of environmentally friendly materials, which can be reused:

- The external packaging is made of cardboard/foil
- The FCKW free shape of foamed polystyrene (PS)
- Polyethylene (PE) foils and bags

Elimination / disposal of the equipment

If the appliance is no longer in use, cut the connecting conduit off the used equipment before its scrapping.

Also, remove the appliance lock or render it useless so that the appliance presents no danger to children while being stored for disposal.



This appliance is marked with a symbol of the crossed out waste container in conformance with the European Directive **2002/96/EC**. Such marking informs that the equipment may not be kept together with other waste coming from the

household after the period of its use. The user is obliged to dispose of the appliance at the waste collection point. The local waste collection points, shops and communal units form an appropriate system enabling the disposal of the equipment.

Handling the used electrical and electronic equipment properly contributes to the avoidance of consequences harmful to the human health and natural environment, resulting from the presence of hazardous substances and improper storage and processing of such equipment.

SPECIFICATION

TYPE	FK326.6 DFZV / KGC 15375 W FK326.6 DFZVX / KGC 15376 E	FK356.6 DFZV / KGC 15377 W FK356.6 DFZVX / KGC 15378 E
Manufacturer	Amica Wronki S.A.	Amica Wronki S.A.
Type of the appliance	fridge-freezer	fridge-freezer
Energy class ¹	A+	A+
Annual power consumption kWh/year ²	327	341
Net usable volume (l)		
Total	278	312
Fridge	188	222
Freezer	90	90
Freezing chamber star classification ³	*/***	*/***
Storage time (hrs), at no power supply	17	17
Freezing capacity (kg/24h))	6	6
Climate range ⁴	SN-T	SN-T
Noise level [dB(A) re1pW]	43 dB (A)	43 dB (A)
Supply voltage V/Hz	230V; 50 Hz	230V; 50 Hz
H x W x D	1848 x 595 x 600	2010 x 595 x 600
Appliance weight (kg)	64	69

¹)A++/A+ (=low consumption) to G (=high consumption).

²)The energy consumption refers to the yearly consumption in kWh, indicated according to DIN EN 153. Deviations may occur in the practical operation of the appliance, depending on the use and place of its location.

³)*= storage room of approximately. -6°C

(**) = storage room of approximately. -12°C

(***) = freezing storage room of approximately -18°C

(*/***) = freezing storage room of approximately -18°C or below

⁴)Climate range means that your set temperature is maintained at "normal" ambient temperature. Should the room temperature drop significantly below the defined scope, the appliance does not work so often and the undesirable temperature increase may occur dojdź do niepożądanego wzrostu temperatury.

SPECIFICATION

The information about the climate range of the appliance is provided on the rated plate. It indicates at which ambient temperature (that is, room temperature, in which the appliance is working) the operation of the appliance is optimal (proper).

Climate range	Permissible ambient temperature
SN	from +10°C to +32°C
N	from +16°C to +32°C
ST	from +16°C to +38°C
T	from +16°C to +43°C

Manufacturer's declaration

The manufacturer hereby declares that the appliance fulfils the requirements of the following European directives:

- The Low Voltage Directive **2006/95/EC**,
- The Electromagnetic Compatibility Directive **2004/108/EC**,

and therefore it has been marked with a **CE** and assigned a declaration of conformity, which is made available to the market supervising authorities.

